

---

Subject: How to set the 50 pins expansion header to 5.0V from default 3.3V

Posted by [gordanic2003](#) on Thu, 06 Jan 2005 14:53:03 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hello everyone,

The 50 pins on the expansion header on Celoxica RC100 board is 3.3V by default.

How to change it to 5.0V using Handel C DK3? I know it has something to do with the 'standard' command but how do I actually use it?

Thank you.

---